

MJM Bigstone LCD Displays

Display Models	Ebike Models	Setup instruction
C300S	ST20, SO20, TR20	Reset by holding “+/-“ together till screen flashing; hold “M/-“ together for 10 sec for the Advanced setting
Bafang BBS C965 (Intelligent)	MTF20, CR20, MT20	Reset by quick “double tap power button”
C600E	MTB20, MTBF20	Reset by press “SET” button
C800	RTF20	Reset by press “SET” button (password 0118)
Bafang KD718	2021 Ebike Models	Hold “+/-“ button together.
KT-LCD5	FB20	Reset by holding “+/-“ together till screen flashing (Display 1), repeat holding “+/-“ together till screen flashing (Display 2 – P1-5), repeat holding “+/-“ together till screen flashing (Display 3 – C1-14)
QS-S4-LCD	Large Scooter	Hold power & Mode to reset
DP C18.UART	MT21-MID	Double click “i” button